


- 1) Press and hold the FACTORY reset button on the back of the router for 15 seconds.
- 2) Connect to the router via WiFi or ethernet
- 3) Open a web browser to http://192.168.1.1
- i Not secure | 192.168.1.1
- 4) The quick start wizard will appear.
- 5) Enter a device password of your choice and confirm this. Click LETS GET STARTED



6) Region and Time Zone. Select United Kingdom in the drop down and click NEXT.



7) ISP LIST. Select OTHER and click NEXT.



8) Enter the following and click **NEXT**.

L2 INTERFACE TYPE: VDSL

VLAN: ENABLE


VLAN ID: 101

INTERNET CONNECTION TYPE: PPPOE


USERNAME replace-username@ghostgb.co.uk

PASSWORD replace-password CONFIRM PASSWORD replace-password



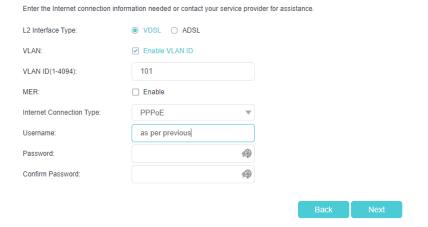

9) WiFi leave default and click **NEXT**. (Un-tick the SMART Box)

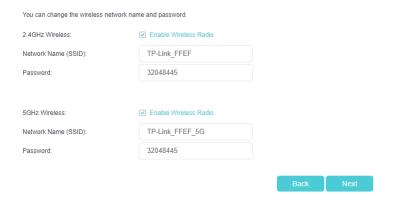

10) You should then see a testing screen.



Testing the Internet connection. It may take one to two minutes. Please wait...

11) Click **FINISH**. This screen will show your information not what is show below.



Finish

